

Section Two

Audio/Video Cable Connections

Connection & Installation


Connect the Nintendo 64 to either your TV or VCR using the Stereo Audio/Video Cable. Choose one of the connection methods on pages 4-6 that matches the connections for your TV or VCR; **you will only need to make one kind of connection.**

- **If your TV or VCR does not have audio/video connections** (i.e., the illustrations on pages 4-6 do not match your TV or VCR), then turn to page 7 for other types of connection methods. You will need to use a Nintendo 64 RF Switch and RF Modulator (sold separately).
- If you currently have a Super Nintendo Entertainment System® connected to your TV or VCR and want to connect both the Super NES® and Nintendo 64 Control Decks, then turn to page 8.

Audio/Video Cable Connections

A Connecting to a Stereo TV


Make sure to plug the Audio/Video Cable into the "INPUT" connections of your TV (Do not use connections labeled "OUTPUT").

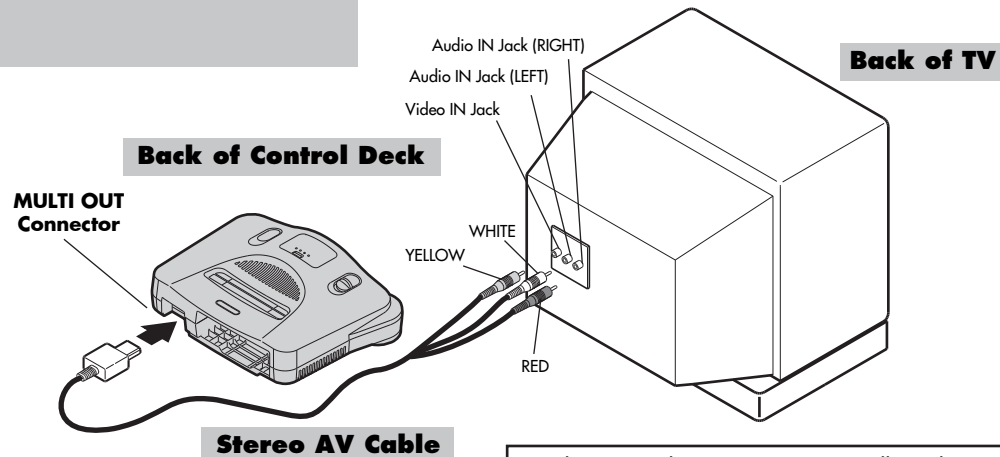

When using this connection, you will need to locate the INPUT SELECT on your TV or TV remote in order for the game to appear on your screen (see complete details on page 11).

B Connecting to a Stereo VCR

Make sure to plug the Audio/Video Cable into the "INPUT" connections of your VCR (Do not use connections labeled "OUTPUT").

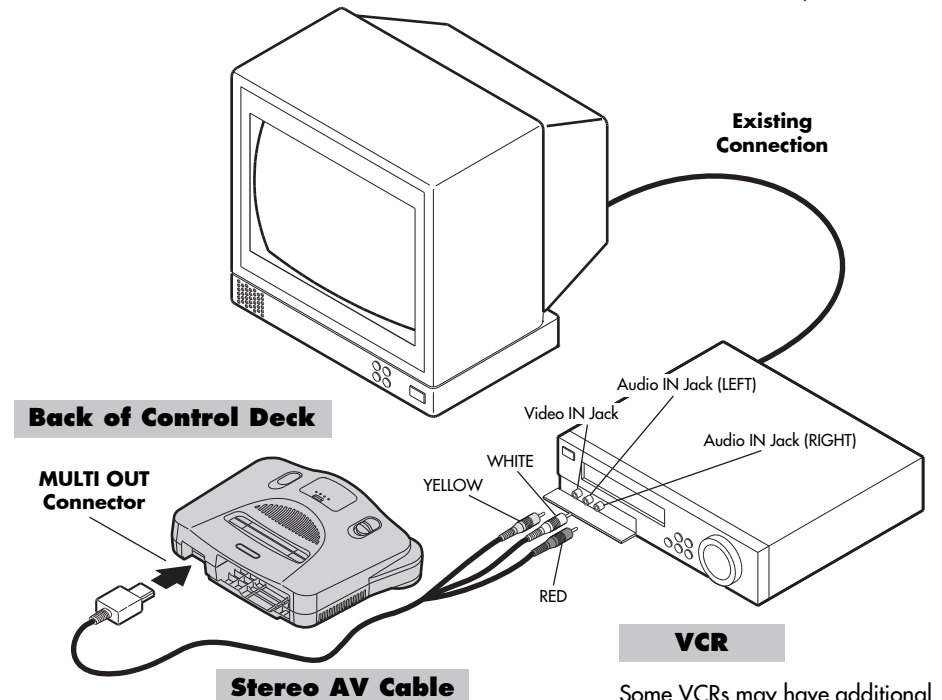

Some VCRs may have additional Audio/Video Input Connections on the back. For more information, see your VCR's instruction manual.

When using this connection, you will need to locate the INPUT SELECT on your VCR or VCR remote in order for the game to appear on your screen (see complete details on page 11).