 


Connecting the Controller

Plug the Nintendo 64 Controller into the socket on the front of the Control Deck as shown.

Up to four controllers can be connected at the same time, but for most games, only the controller plugged into socket number one will operate the START button.

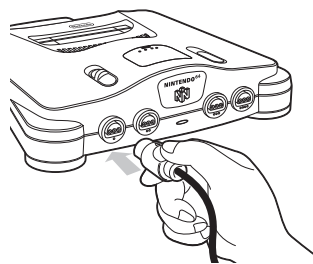

 
CAUTION

Foreign materials (such as food or beverage residue) may cause the controller buttons to stick. To avoid this problem, keep food and beverages away from the controller and always wash your hands before playing.


Each game may have different functions for each of the buttons, + Control Pad and Control Stick. Depending on the game, the controller will be held in one of the three positions shown. For further instructions, consult the instruction booklet for the Game Pak you are using.



Right position

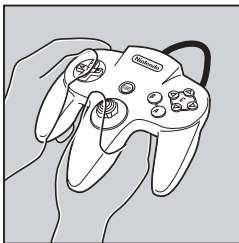

Left position

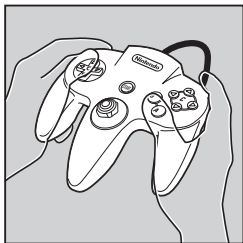 

Home position

Once all connections are made, turn to the next page for operating instructions.

Section Three

How to Operate

After making the necessary connections shown in Section 2, place the Control Deck on a hard, flat surface, such as a television stand, table top or cabinet. Be sure to allow plenty of space around the Control Deck for ventilation. Once the Control Deck is properly located, continue with the following instructions:

CAUTION

The Control Deck has several ventilation slots in the housing designed to maintain adequate ventilation. Do not operate the Control Deck on a carpet, bed, sofa or other soft surface, or in any location where any of the ventilation slots may become covered or obstructed.

1. Turn your television ON. If the Nintendo 64 Control Deck is connected to your VCR, turn the VCR power ON also and set the VCR to "VCR" mode.
- 2A. If you are using an AV connection to your TV or VCR (connection method A, B or C), you will need to set the appropriate input select setting for your TV and/or VCR.

Input Select Information

NOTE: The most common locations for an "Input Select" are: a button somewhere on the front of the TV or VCR, a button on the remote control, a high-numbered channel on the TV or VCR, or an on-screen menu selection. Manufacturers of TVs and VCRs use different names and locations for "Input Select". The common names for the input select are: input, select, input select, line, line in, source, in, EXT, AUX. Consult your TV or VCR instruction manual for details.

- 2B. If you are using an RF Switch connection to your TV (connection method D), then set your TV to Channel 3. Also set the switch on the back of the Nintendo 64 RF Modulator to Channel 3. If Channel 3 is broadcasting in your area, change the switch on the back of the RF Modulator and your TV to Channel 4.

