

Section One

NINTENDO® 64 INSTRUCTION BOOKLET

Congratulations on your purchase of the Nintendo 64, the world's most advanced 64-bit video game entertainment system, featuring CD-quality stereo sound, incredibly smooth and realistic graphics and the most exciting video games ever experienced!

Read both the setup instructions and the separate *Consumer Information and Precautions Booklet* before attempting to connect the Nintendo 64 Control Deck to your TV or VCR. If, after reading all setup instructions, you are still unable to hook up your system, please call the Consumer Assistance Hotline at the number listed below.

Need Help with Installation,
Maintenance or Service?




Mon. - Sat., 6:00a.m. - 9:00p.m.; Sun., 6:00a.m. - 7:00p.m., Pacific Time
(Times subject to change)

You can visit our web-site at www.nintendo.com for additional set-up information, product news, and game information.

Nintendo also has a free automated information line available for product news and game information, call the Powerline at 1-425-885-7529. This may be a regular long distance phone call. Please ask permission from whomever pays the phone bill.


Nintendo 64 Components

Control Deck

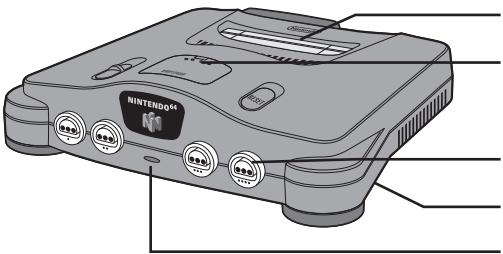

- Game Pak Slot
- Memory Expansion
Do not remove the Jumper Pak from the Memory Expansion connector - the Control Deck will not operate.
- Controller Sockets 1-4
- Expansion Connector (on bottom)
- Power Indicator Light

Back View of Control Deck

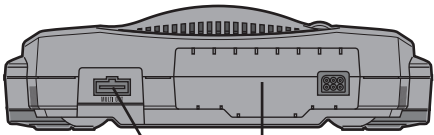

- AC Power Supply Connection Port
- Multi Out Connector

Nintendo 64 Controller



On the bottom of the controller is a connector slot for loading an N64 Controller Pak™ or Rumble Pak™ (sold separately). Look for Game Paks displaying the N64 Controller Pak and/or Rumble Pak icons.

Bottom View of Controller



AC Power Supply



Stereo Audio/Video Cable

